

# Radio Operator's Handbook

## Contents

	<b>Page</b>
<b>Preface</b>	xiii
<b>Chapter 1</b>	
<b>Radio and Radio Teletypewriter Sets</b>	
<b>Section I.</b>	
<b>Radio Set AN/GRC-106</b>	
<b>Installation Procedures</b>	1-0
<b>Prestart Procedures</b>	1-0
<b>Starting Procedures</b>	1-1
<b>Tuning Procedures</b>	1-2
<b>Stopping Procedures</b>	1-5

**DISTRIBUTION RESTRICTION:** Distribution authorized to U.S. Government agencies and their contractors only to protect technical or operational information from automatic dissemination under the International Exchange Program or by other means. This determination was made on 15 October 1990. Other requests for this document will be referred to Commander, U.S. Army Signal Center and Fort Gordon, ATTN: ATZH-DTL, Fort Gordon, GA 30905-5075.

**DESTRUCTION NOTICE:** Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

\*This publication supersedes TC 24-19, 24 June 1985.

	<b>Page</b>
<b>Section II.</b>	
<b>Radio Teletypewriter Set AN/VSC-2</b>	
Installation Procedures	1-7
Prestart Procedures	1-7
Starting Procedures	1-8
Tuning Procedures	1-11
Stopping Procedures	1-14
Simplified Installation Procedures	
Using TSEC/KW-7	1-15
Simplified Installation Procedures	
Using TSEC/KG-84A	1-20
<b>Section III.</b>	
<b>Radio Teletypewriter Set AN/VSC-3</b>	
Operating Instructions	1-25
Prestart Operating Procedures	1-25
Starting Procedures	1-27
Radio Set AN/GRC-106(*) Starting and Tuning Procedures	1-31
Intercommunications Set AN/VIC-1(V)	
Starting Procedures	1-35
Intercommunications Set AN/VIC-1(V) Local Operation	1-36
Stopping Procedures	1-38
Radio Teletypewriter Set AN/VSC-3(*) Cabling Diagrams	1-38
<b>Section IV.</b>	
<b>Radio Teletypewriter Set AN/GRC-122/142</b>	
Installation Procedures	1-41
Major Power Switches	1-41
Prestart Procedures	1-43
Starting Procedures	1-46

	<b>Page</b>
Tuning Procedures	1-50
Operating Communications Terminal AN/UGC-74 (in the ICT State)	1-54
Stopping Procedures	1-57
Troubleshooting	1-59
(Plain and C Models) Power Distribution Panel	1-66
(A, B, and E Models) Power Distribution Panel	1-68
OWR or DX Inverters	1-71
Shelter	1-71
Operation	1-73

**Section V.**  
**Radio Set AN/GRC-26D**

Installation Procedures	1-86
Prestart Procedures	1-86
Starting and Preset Procedures	1-88
Tuning Procedures	1-92
Stopping Procedures	1-94

**Section VI.**  
**Radio Teletypewriter Set AN/GRC-46**

Installation Procedures	1-96
Preoperational Procedures	1-96
Prestart Procedures	1-97
Starting Procedures	1-99
FSK Reception	1-100
Page Printer and Reperforator-Transmitter Operation	1-106
FSK Transmission	1-109
Stopping Procedures	1-111

**Section VII.  
Radio Set AN/FRC-93**

Description	1-112
Installation Procedures	1-113
Preliminary Checks	1-113
Receiver Tuning	1-114
Transmitter Tuning	1-115
VOX Adjustment	1-116
Amplifier Tuning	1-118
Power Indications	1-121

**Section VIII.  
Radio Set AN/VRC-64**

Operating Procedures	1-123
----------------------	-------

**Section IX.  
Radio Set AN/VRC-12 Series**

Installation Procedures	1-123
Operating Procedures	1-125

**Section X.  
NRI System AN/VRC-12**

Installation Procedures	1-126
Prestart Procedures	1-128
Starting and Tuning Procedures	1-128
Stopping Procedures	1-129

**Section XI.  
Radio Set Control Group AN/GRA-6**

Installation Procedures (with Radio Set AN/GRC-106)	1-130
Operating Procedures	1-131

<b>Section XII.</b>	
<b>Radio Set Control Group AN/GRA-39</b>	
Installation Procedures	1-132
Operating Procedures	1-133
Installation Procedures (using the AN/GRA-39, Receiver/Transmitter RT-524, and Switchboard SB-22/PT)	1-134
Presets and Adjustments	1-136
<b>Section XIII.</b>	
<b>Radio Set AN/PRC-77/25</b>	
Operating Procedures	1-137
<b>Section XIV.</b>	
<b>Radio Set AN/PRC-104A</b>	
Installation and Operating Procedures	1-139
Preoperational Checks	1-144
Presets	1-144
Energizing Procedures	1-145
Tuning Procedures	1-146
Test Procedures	1-146
Operating Procedures	1-147
Modes of Operation	1-148
Stopping Procedures	1-151
Disassemble and Transport Procedures	1-151
Operator Daily and Weekly PMCS	1-152
<b>Section XV.</b>	
<b>Radio Set AN/GRC-213</b>	
Description	1-155
Installation Procedures	1-157
Operating Procedures	1-158
Preoperational Checks	1-159

	<b>Page</b>
Presets	1-160
Energizing Procedures	1-161
Tuning Procedures	1-162
Stopping Procedures	1-162
Modes of Operation	1-163
Operator Daily and Weekly PMCS	1-165
Operator Troubleshooting	1-167
Equipment Performance Check (EPC)	1-167

**Section XVI.  
Radio Set AN/GRC-193A**

Description	1-169
Installation Procedures	1-170
Operating Procedures	1-171
Preoperational Checks	1-172
Presets	1-173
Energizing Procedures	1-174
Tuning Procedures	1-175
Stopping Procedures	1-176
Modes of Operation	1-177
Preventive Maintenance Checks and Services (PMCS)	1-179
Operator Troubleshooting	1-184

**Section XVII.  
Single-Channel Ground and Airborne Radio  
System (SINGARS) and AN/TSC-124  
(SCOTT)**

SINGARS	1-196
AN/TSC-124 (SCOTT)	1-197
Regency Net System	1-199

## Chapter 2 Generator Sets

### Section I. Generator Set 10 kW (PU-619)

Installation Procedures	2-1
Prestart Procedures	2-4
Starting Procedures	2-5
Stopping Procedures	2-6

### Section II. Generator Set 5 kW (PU-620)

Prestart Procedures	2-7
Starting Procedures	2-8
Stopping Procedures	2-9

### Section III. Generator Set 3 kW (MEP-026A)

Installation Procedures	2-10
Prestart Procedures	2-11
Electrical Starting Procedures	2-12
Manual Starting Procedures	2-13
Stopping Procedures	2-14

## Chapter 3 Antennas 3-0

### Section I. Antenna Selection 3-0

### Section II. Whip Antenna 3-2

### Section III. Antenna RC-292 3-5

<b>Section IV.</b>		<b>Page</b>
<b>Antenna Group OE-254/GRC</b>		
Description		3-6
Installation		3-7
<b>Section V.</b>		
<b>Doublet Antenna</b>		
Determining Doublet Antenna Length		3-19
Determining Doublet Antenna Height		3-20
Orientation		3-21
Installation Using AB-155A/U		3-21
<b>Section VI.</b>		
<b>NVIS Antenna AS-2259/GR</b>		
Description		3-24
Installation		3-26
<b>Section VII.</b>		
<b>Field Expedients for Antennas</b>		3-32
<b>Section VIII.</b>		
<b>Grounding Systems</b>		3-35
<b>Chapter 4</b>		
<b>Communications Security Equipment</b>		
<b>Section I.</b>		
<b>TSEC/KY-8</b>		
Programming Instructions		4-1
Operating Instructions (with Remote Control Unit)		4-1
Operating Instructions (without Remote Control Unit)		4-2



	<b>Page</b>
<b>Section II.</b>	
<b>TSEC/KY-38</b>	
Programming Instructions	4-3
Operating Instructions	4-4
Local Remedy for Minor Problems	4-5
<b>Section III.</b>	
<b>HYL-3/TSEC</b>	
Prestart Operating Procedures (All Modes)	4-6
Retransmission Procedures	4-6
<b>Section IV.</b>	
<b>TSEC/KY-57</b>	
Installation in Manpack Operations	4-7
Loading Procedures	4-8
Operating in the SECURE Mode	4-10
<b>Section V.</b>	
<b>TSEC/KY-65</b>	
Installation in Manpack Operations	4-11
Installation in Vehicle Operations (AN/GRC-193A)	4-13
Installation in Vehicle Operations (AN/GRC-213)	4-13
Loading Procedures	4-14
Operations	4-17
<b>Section VI.</b>	
<b>TSEC/KG-84A</b>	
Description	4-18

**Chapter 5**  
**Operating Procedures**

**Page**

**Section I.**  
**Radiotelephone Procedures**

Phonetic Alphabet	5-1
Numerical Pronunciation	5-2
Prowords Listed Alphabetically	5-4
Opening a Net (Nonsecure Voice)	5-9
Opening a Net (Secure Voice)	5-10
Radio Checks	5-10
Passing Message Traffic	5-11
Station Entering Net	5-12
Station Leaving Net	5-12
Closing a Net (Nonsecure Voice)	5-13
Closing a Net (Secure Voice)	5-13
Radiotelephone Message Format	5-13

**Section II.**  
**Radio Teletypewriter Procedures**

Prosigns	5-17
Precedence Prosigns (Interservice Use)	5-19
Frequently Used Operating Signals	5-20
Machine Functions	5-26
Establishing Radio Teletypewriter Communications (Continuous Tuning Sets)	5-26
Garbled Transmission Received From E6T	5-26
Establishing Radio Teletypewriter Communications (Digital Tuning Sets)	5-27
Opening a Net	5-27
Opening a Directed Net	5-28
Sequence of Answering	5-28
Station Entering Opened Net	5-29

	<b>Page</b>
Closing a Net	5-29
Teletypewriter Message Format	5-30
Teletypewriter Repetition Procedures	5-30
Teletypewriter Interrogation Procedures	5-35

### **Section III. Radiotelegraph Procedures**

Code Characters	5-38
Prosigns	5-39
Operating Signals	5-40
Opening a CW Net Using Authentication (For Digital Tuning Radio Sets such as the AN/GRC-106 and AN/PRC-70/74)	5-42
Tuning Station on a Net (For Continuous Tuning Radio Sets such as the AN/GRC-19, AN/GRC-46, and AN/GRC-26D)	5-42
Making a Free Net a Directed Net	5-43
Making a Directed Net a Free Net	5-43
Closing a CW Net Using Authentication	5-44
Closing a CW Net Using Authentication (When closing for a certain period of time)	5-44
Radiotelegraph Message Format	5-45
Radiotelegraph Message Repetition Procedures (Identification of Parts or Portions of Messages)	5-49
Repetition After Receipt	5-50
Verification	5-50
Acknowledgements	5-51

<b>Section IV.</b>	<b>Page</b>
<b>NRI Calls</b>	5-51
<b>Section V.</b>	
<b>Operator Number Sheet and Circuit Log</b>	
Operator Number Sheet	5-55
Circuit Log	5-57
<b>Section VI.</b>	
<b>Electronic Warfare</b>	
Jamming	5-60
Implementing ECCM Procedures	5-61
MIJI Reporting	5-62
<b>Section VII.</b>	
<b>Using the SOI</b>	
Encode and Decode Messages Using KTC-600 Tactical Operations Code	5-66
Encrypt/Decrypt Numbers and Grid Zones	5-66
Authentication Using KTC-1400D	5-67
<b>Section VIII.</b>	
<b>World Time Zone Conversion Chart</b>	5-67
<b>Section IX.</b>	
<b>United States Message Text Format</b>	5-68
Glossary	Glossary-1
References	References-1